

HOME LAUNDRY AND DISHWASHERS


SWITCHES DOOR, TEMPERATURE, MAINS

EC124

ORIGINAL PART

MAINS SWITCH - 6 CONTACT

 Suitable For:
INDESIT/HOOVER DISHWASHER
- D4800, D5000; DAEWOO
DISHWASHER - DD12

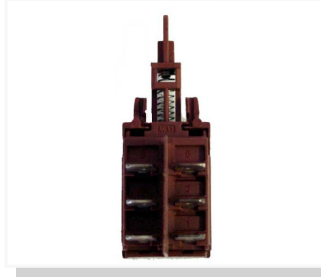


018216

MICROSWITCH

ORIGINAL PART

 Suitable For:
INDESIT DISHWASHERS -
DG5000, DG5100, DG5400

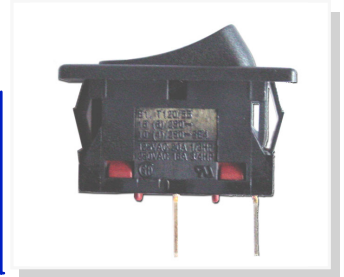


A268

OEM REF: MCG007AA1

DOOR MICRO SWITCH

 
Suitable For:
INDESIT DISHWASHER - 115,
116, 2115, 2116, D310, D350,
D360, D3000WI, D3050WI

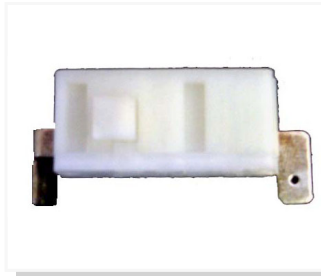

530000700

DOOR SWITCH

 Suitable For:
DAEWOO DISHWASHER - DD12,
KIC - D4800, D5000H

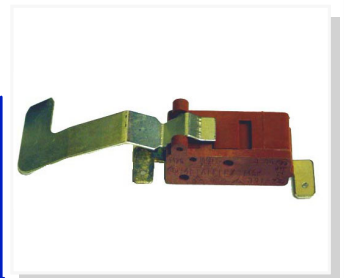

PBS3

**UNIVERSAL THREE WAY
PUSH BUTTON SWITCH**

Suitable For:
INDESIT DISHWASHER - 2263,
D360, D3300; INDESIT AFL - 2091,
2092, 2093, 2099, W420XP,
W442BF, W600 INOX;
KELVINATOR AFL - A205, A206,

 


4819 271 38062

DOOR MICROSWITCH

ORIGINAL PART

Suitable For:
WHIRLPOOL DISHWASHER -
ADG623, ADG635

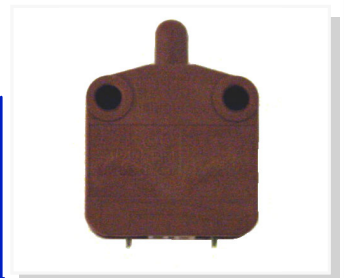

A164

OEM REF: 041184

ON/OFF SWITCH (NO+NO)

Suitable For:
INDESIT DISHWASHERS -
DG5100/6100

