

**SWITCHES**

**LIGHT, FAN**

**RS11**


**LIGHT SWITCH**

**008867**

**LIGHT SWITCH**

ORIGINAL PART

INDESIT FRIDGE R3000/R3300

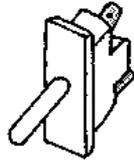

SQUARE PUSH FIT



**RS14**


**UNIVERSAL LIGHT SWITCH**

**1045 0150 00**


**LIGHT SWITCH**

ORIGINAL PART

SUITABLE WITH KIC  
FRIDGE/FREEZERS - ALSO FITS  
OTHER MAKES

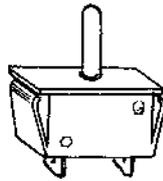

ROUND PUSH FIT

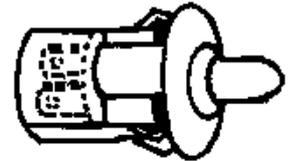

**RS17**

**LIGHT SWITCH**


**1060 0100 00**

**LAMP HOLDER - SES**

KIC REFRIGERATORS



PUSH FIT - SIDE ENTRY  
TERMINALS

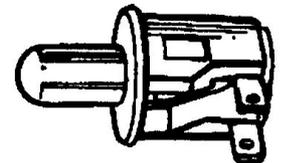

**RS19**

**DOUBLE LIGHT SWITCH**

**2J03723H**


**LIGHT SWITCH**

ORIGINAL PART

GOLDSTAR FRIDGE - GR38 - 3BDS



SUITABLE WITH GOLDSTAR AND  
SAMSUNG FRIDGES

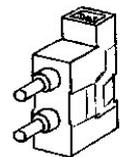

**RS20**

ORIGINAL PART

**LIGHT SWITCH**


**RCF-LP**

**LAMP HOLDER WITH FLOAT  
SWITCH**

KIC/DEFY CHEST FREEZERS -  
ACTIVATED WHEN LID IS OPENED



SUITABLE WITH MOST KIC  
FRIDGE/FREEZERS

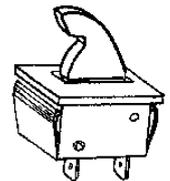

**RNF014**

**COMBINATION LIGHT/FAN SWITCH**

SQUARE PUSH FIT

